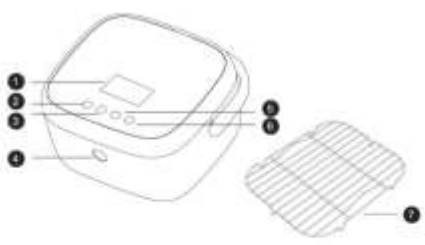



Brand Name of Product	UVC LED Boxes
Generic Name of Product	UVC LED Boxes
Product Code Number(s)	UVC-001, UVC-002
Intended Use	Sanitize personal items with UV-C light.
Range of Applications for Product	
Key Specifications of Product	<ul style="list-style-type: none"> • 3-minute cycle • Wavelength between 260-280 nm • Portable • 2 different models- UVC-001- Outer dimensions - 8.5 x 4 x 2.8 inches Inner dimensions- 8.5 x 3.5 x 1.5 inches Power adapter Power- 8W Reflective glass provides 360° for universal support CE, ROHS, and FCC certified UVC-002- Dimensions- 11.8 x 10.5 x 6 inches Power adapter Power- 18V= 27W/1.5A Input Interface- Type-C USB Ozone free Smart drying Stainless steel rack

Shipping & Storage	
Shipping Conditions & Requirements	
Storage Conditions	
Packaging Contents	
Shelf Life	<ul style="list-style-type: none"> • Lifespan of UV LED bulbs is 10,000 hours. • Product can be used for 3 years.

Instructions for Using Product	
Description of Use(s)	Sanitize personal items with UV-C light.
Preparation for Use	Remove the UVC sanitizer from packaging.
Diagrams (drawings, pictures)	<p>UVC-002</p>  <ol style="list-style-type: none"> 1 Time Display Screen 2 Fast Sterilize Button 3 Sterilize&Deodor+Smart Drying+Temp.control+Sterile Storage Button 4 Pop up Button 5 Sterilize&Deodor+Sterile Storage Button 6 On/OFF Button 7 Stainless steel tool holder

	<p>UVC-001</p> <p style="text-align: center;">Disinfection and Storage 2 in 1</p> 
<p>Steps for Use of Product</p>	<p>UVC-001</p> <ol style="list-style-type: none"> 1. Plug in the UVC box. 2. Open the lid and place the item in the box and close the lid. You will hear a voice message. 3. Press the one-button start function for 0.5 seconds. 4. After 3 minutes, the UVC box will automatically turn off and a voice will prompt (completed) to let you know sanitation is complete. 5. Do not open lid during sanitation. <p>UVC-002</p> <ol style="list-style-type: none"> 1. Press the ON/OFF button on top of lid to ON. 2. Open the lid and place items on the rack. 3. Close the lid. 4. Press the desired cycle. 5. When finished, press the ON/OFF button to turn OFF.
<p>Interpretation of Test Results</p>	
<p>Contraindications of Test Results</p>	
<p>Documentation</p>	
<p>Special Warnings and Cautions</p>	<p>Not for use with any healthcare product. Intended only for personal-use items (cell phone, keys, etc.).</p>
<p>Disposal</p>	

<p>Reprocessing Instructions</p>	
<p>Point of Use</p>	
<p>Preparation for Decontamination</p>	
<p>Disassembly Instructions</p>	
<p>Cleaning – Manual</p>	
<p>Cleaning – Automated</p>	
<p>Disinfection</p>	
<p>Drying</p>	
<p>Maintenance, Inspection, and Testing</p>	<ul style="list-style-type: none"> • UVI-001 indicators from Healthmark can be used to verify exposure to UV-C light during the cycle. • Run two consecutive cycles (6 minutes) with the UVI-001 to compare to the color interpretation chart.
<p>Reassembly Instructions</p>	
<p>Packaging</p>	
<p>Sterilization</p>	
<p>Storage</p>	

Additional Information	
Related Healthmark Products	
Other Product Support Documents	PPE Brochure, PPE Price List
Reference Documents	
Customer Service Contact	Healthmark Industries Company, Inc. 18600 Malyn Blvd. Fraser, MI 48026 1-586-774-7600 healthmark@hmark.com hmark.com

2020-10-05 Suzanne Latta